




KF35, KF40, KF40DP, KF5013, KF5013DP, KF5030, KF5030DP WHAT TO DO BY THE USER BEFORE INSTALLATION

Make sure that you carried out below instructions completely before calling your technical service for installation.

WATER PRESSURE NEEDED	2-4 Bar 8/10 lt/min
WATER HARDNESS (max.) / CONDUCTIVITY (max.)	12°dF / 1000 µS / cm (25°C)
ELECTRIC CONNECTIONS	220V / 50-60Hz
CABLE	3x2.5 TTR (Phase, Neutral, Earth)
FUSE FOR KF35, KF40, KF40DP, KF5013, KF5013DP	16A Monophase (automat)-20A 30mA leakage current relay
FUSE FOR KF5030, KF5030DP	25A Monophase (automat)-32A 30mA leakage current relay
WATER INLET	3/4"
WASTE WATER OUTLET	Ø40mm

WARNINGS

- Waste water outlet of the machine must be maximum 150 cm away from the ground. The outlet must be on the ground for the models without drain pump (KF35, KF40, KF5013, KF5030).
 - Water inlet must be maximum 100 cm away from the machine. A pressure pump must be used if the water pressure is less than 2 bars.
 - Use water softener if the water hardness is more than 12°dF and the conductivity is more than 1000 S/cm.
- Failures caused by the water hardness and conductivity are not covered by the warranty!**
- Supplying the electricity and plumbing till the machine is the user's responsibility. **There must be an earthed automat fuse and leakage current relay on the wall behind the machine.** Please see above table for the values. Detergent pump connection union hole is marked behind the machine.

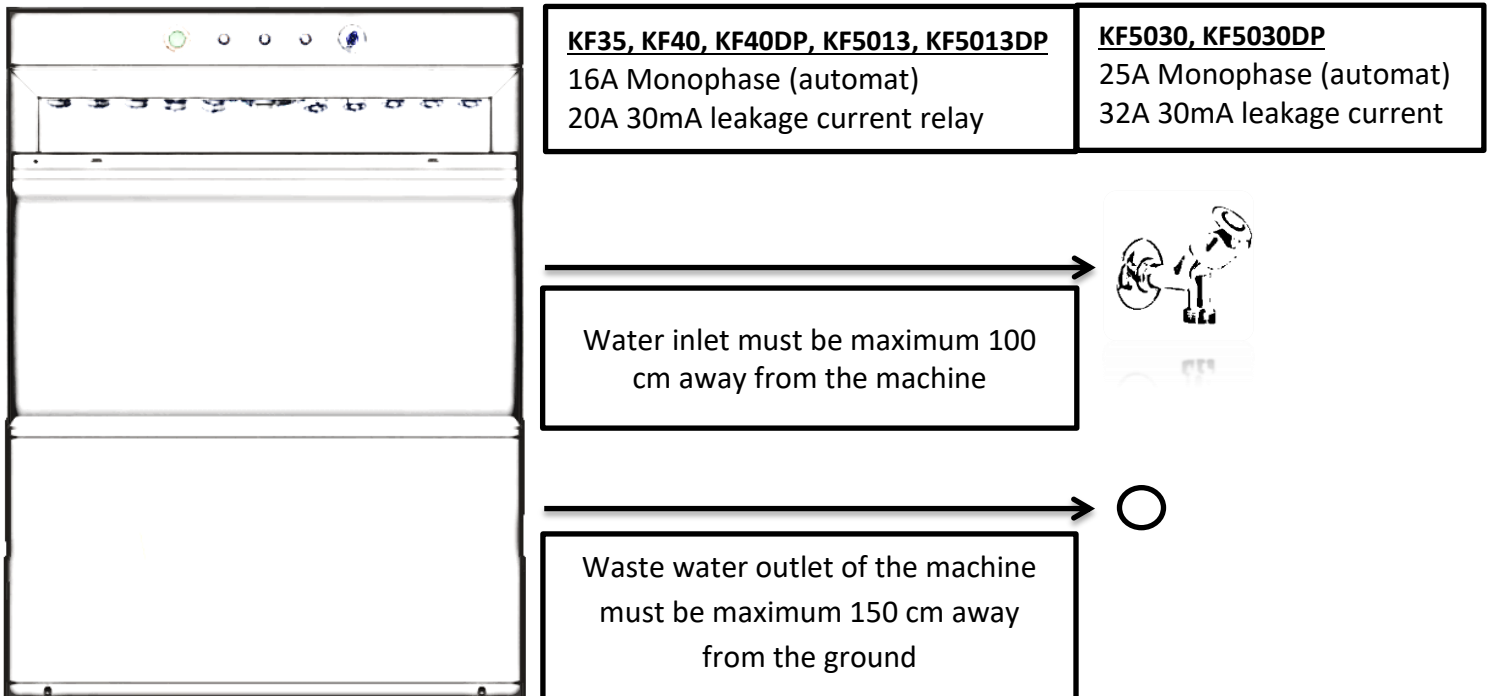

READ THE USER MANUAL CAREFULLY BEFORE OPERATING YOUR MACHINE!